



1

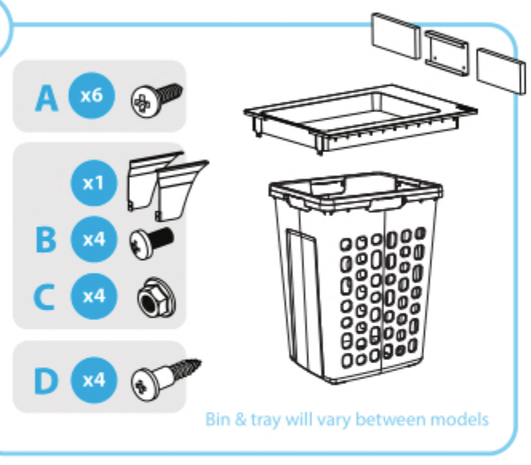


Supplied components

2

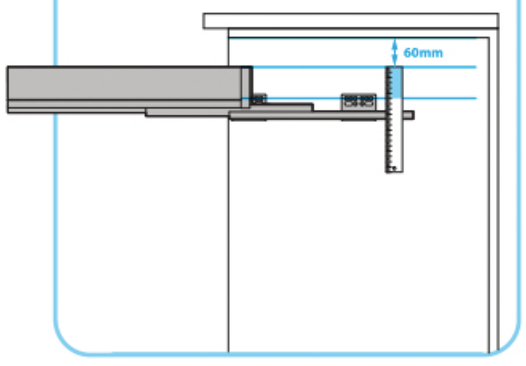


Measure 60mm (minimum) to top of runner and mark location of mounting holes

3

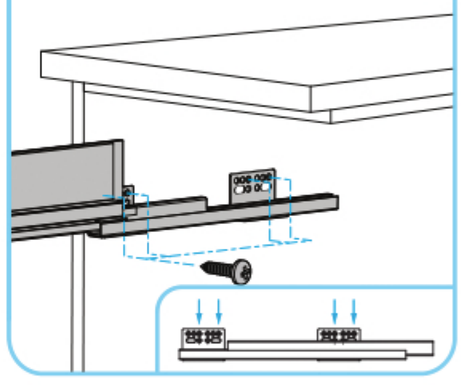


Mount runners as per manufacturers instructions (runners and screws not supplied)

4

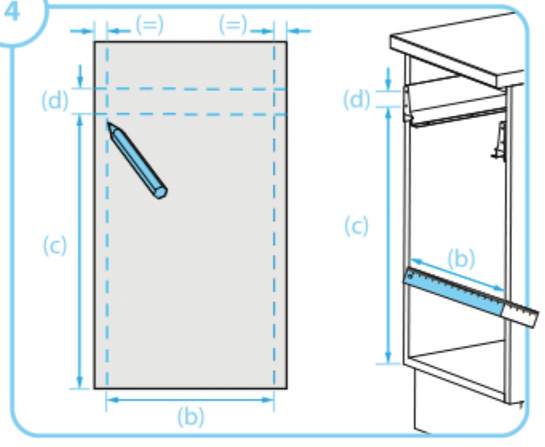


Measure the cabinet inner width (b), and the runner hole height (c), and spacing (d), mark on the door

5

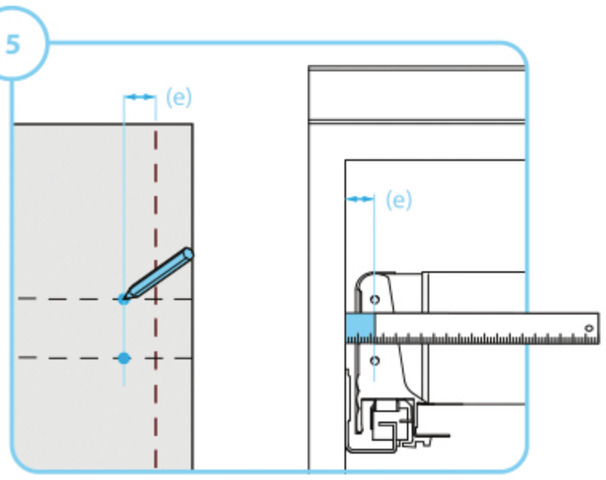


Measure the hole inset distance (e) and mark on the door

6

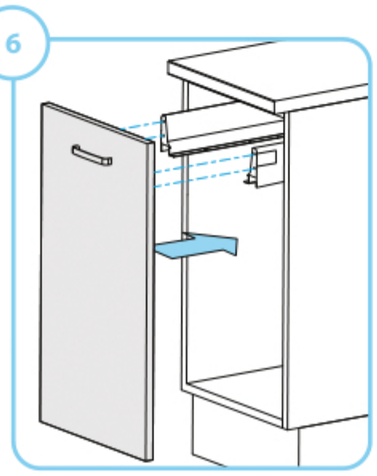


Mount door runner brackets to door and clip into the runners (screws not supplied)

7

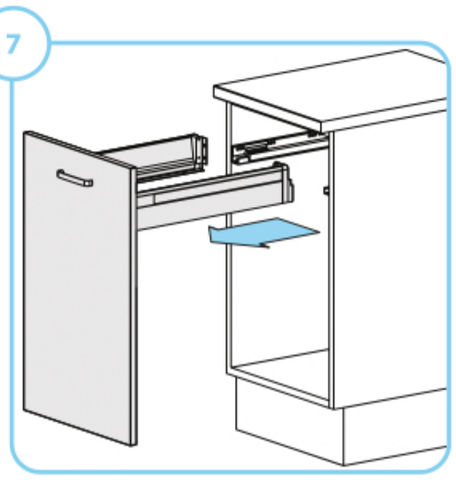


Remove drawer assembly

8

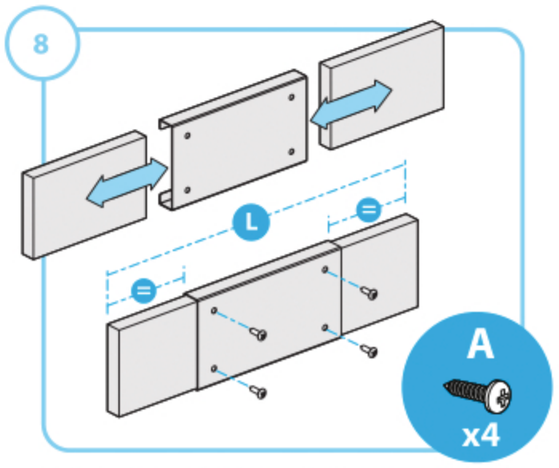


Adjust drawer back panel to correct size (refer to runner instructions). Make sure the bracket is centred, then fix with supplied screws

9

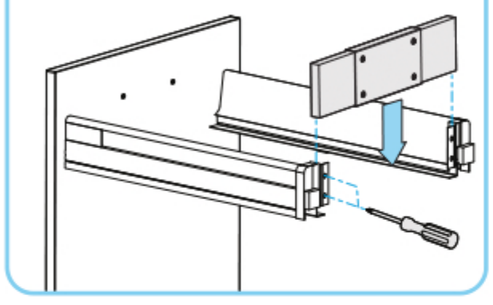


Install drawer back panel

10

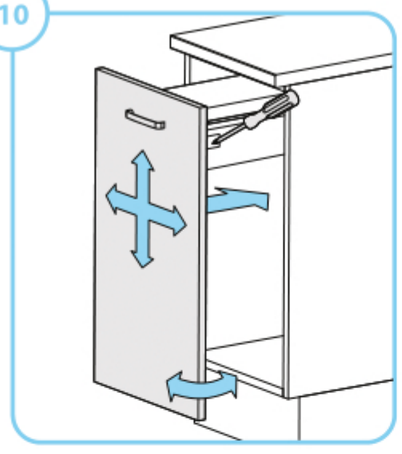


Re-install drawer assembly and adjust door

11

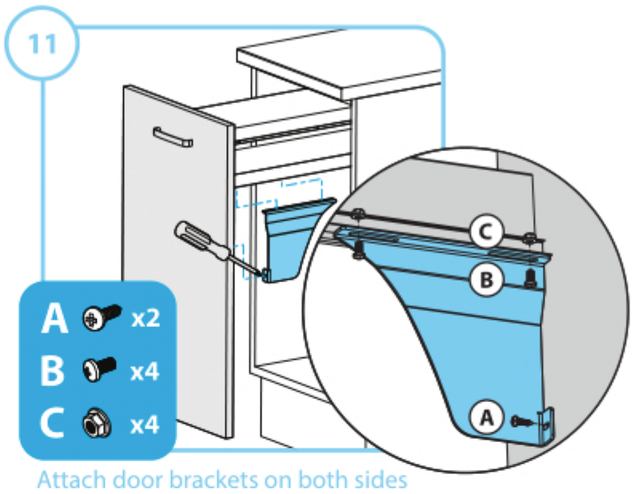


Attach door brackets on both sides

12

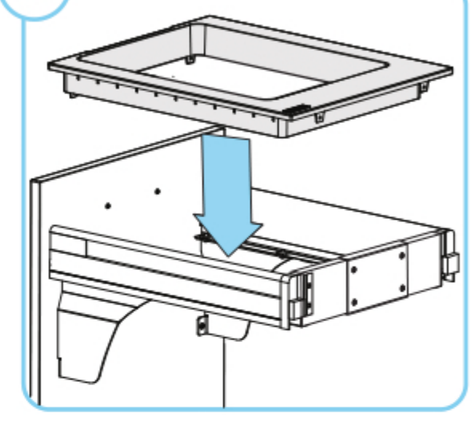


Install tray

13

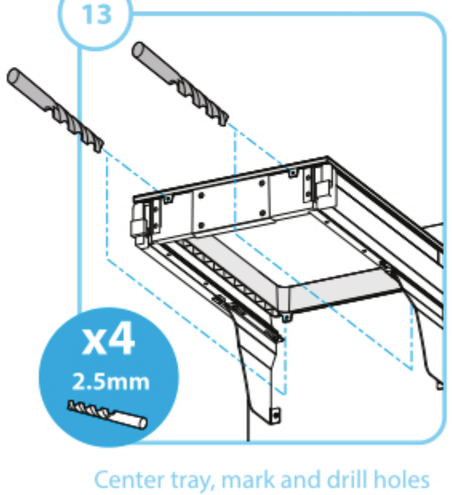


Center tray, mark and drill holes

14

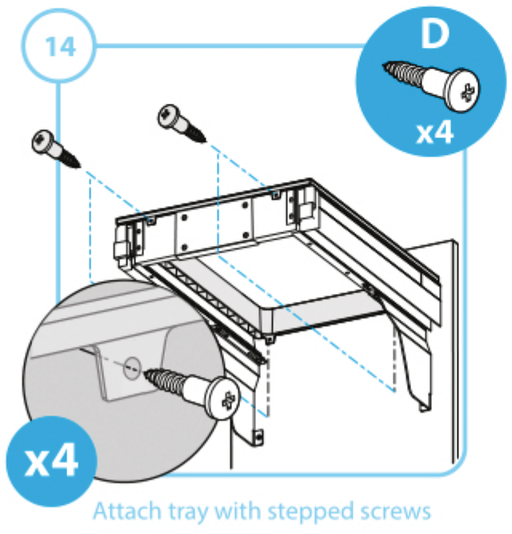


Attach tray with stepped screws

15

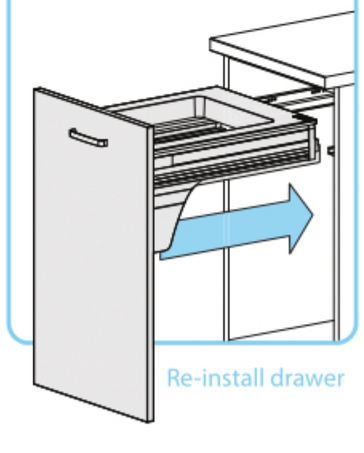

Re-install drawer

16

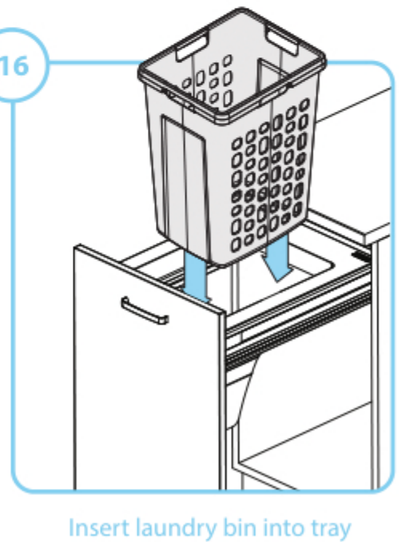

Insert laundry bin into tray